

**P. Graham
DUNN**

EST. 1976

INSTRUCTIONS: POPTR1 Floor Display

Includes:

- A. Side Panels (2)
- B. Topper (1)
- C. Trays (4)
- D. Topper Tray (1)
- E. Screws (10)

Notes:

- Two person assembly
- Suggested tools: Drill with Phillips Head Bit




22"W x 62" H x 18" D



Side Panels



Topper

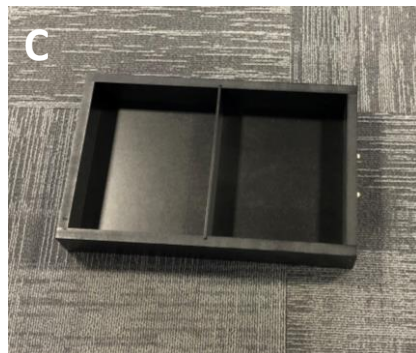

Tray



Topper Tray



Screws

1. Align dowels on side of Tray (C) with holes at bottom of Side Panel (A) and slide together.




2. Drill screw (E) into Side Panel (A) to attach Tray (C).



3. Repeat steps 1 and 2 for second Side Panel (A).

4. Now that Tray (C) and Side Panels (A) are affixed, carefully lift Side Panels (A) and position the display upright.

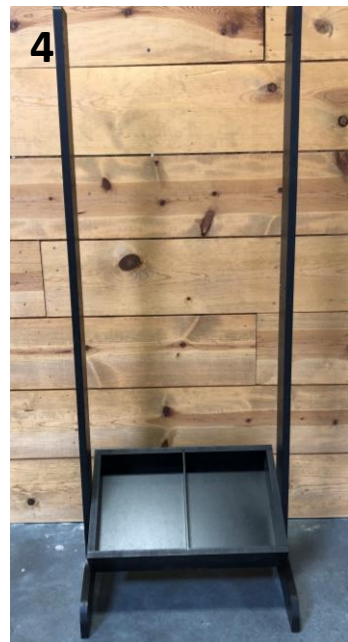

5. Flex Side Panels (A) to insert remaining Trays (C) in a similar fashion. Drill Screws (E) into Side Panels (A) to secure each Tray (C).



6. Repeat step 5 for Topper Tray (D), with bracket on back. Insert Topper (B) into bracket on the back of the Topper Tray (D).



7. Congratulations! Display is ready to load with product.

Christmas Ornaments



POPTR1-ORN1

Christmas Shapes



POPTR1-SHP1